



GB: MANUAL

Thanks for choosing [Poolwonder](#).

1. Attach the cleaner together with the filterbag at the lower end of the telescopic pole.
 2. The cleaner will be switched automatically when it is in the water and start cleaning and a blue LED will light.
- If the blue LED blinks in the water, the device should be charged soon.
4. Detach the reusable filterbag and wash it.

Charging: before charging dry the stainless steel pins. The batteries should be charged in max. 3 hours. Please connect the plug of the charger to the device.

Charging is indicated by a status LED shining through the semitransparent cover of the cleaner (charging = red/orange). The integrated charge control recognizes a fully charged battery (= green LED) and automatically switches off and therefore cannot be overcharged.

Troubleshooting: if the cleaner does not work properly:

- a.) Clean the filterbag.
- b.) Remove leaves from the propeller

Attention:

Poolwonder is not a toy!

Do not touch the propeller when it is running!

Do not leave the device in the sun!

Do not use Poolwonder in inflammable liquids!

Do not dispose the batteries in the trash, do not short-circuit it and do not throw it into open fire!

